


## Factory Default

If you forget your password, please follow the steps for restoring the IP camera to factory default.

- Remove the power and Ethernet cable. Press and hold the button shown in the picture below.

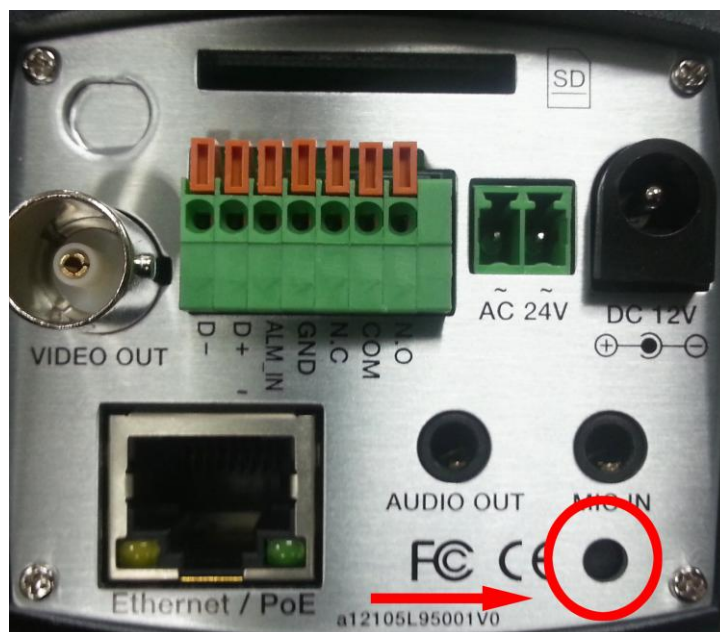

- Connect the power back to the camera. It will take around 30 seconds for the camera to boot.
- Release the button and plug-in the Ethernet cable after the camera finishes booting.
- Re-login the camera by using the default IP (<http://192.168.1.200>), and user name: **admin**, password: **admin**.